
















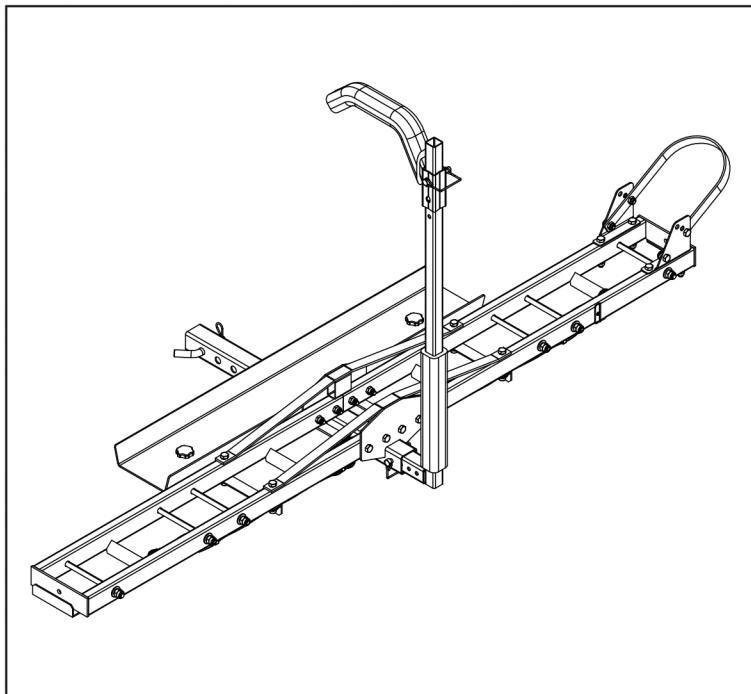
MOTORCYCLE CARRIER









MODEL: CAR-MC-CARRIER-6039

ASSEMBLY INSTRUCTIONS

Please read the instructions carefully before assembling and using the product

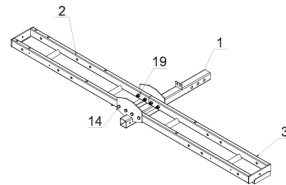
		
1PC	1PC	1PC
① Main arm	② Left tyre cradle	③ Right tyre cradle
		
1PC	1PC	2PCS
④ Steady support	⑤ Steady arm	⑥ Bridge support
		
1PC	2PCS	1PC
⑦ Ramp	⑧ Wheel bracket	⑨ Large bolt
		
1PC	1PC	M12x200x6PCS
⑩ Right support plate	⑪ Wheel bracket	⑫ Large bolt
		
M10x70x8PCS	M10x45x8PCS	M10x20x4PCS
⑬ Bolt	⑭ Bolt	⑮ Bolt



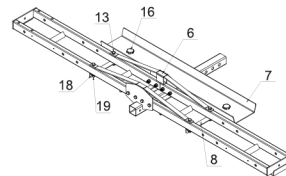
	
M10x2PCS	M10x4PCS
⑯ Screw	⑰ Washer
	
M12x6PCS	M10x20PCS
⑱ Washer	⑲ Nut
	
M12x6PCS	Ø10x70x2PCS
⑳ Nut	㉑ Plug
	
1PC	1PC
㉒ Plug	㉓ Pin

Section**1**

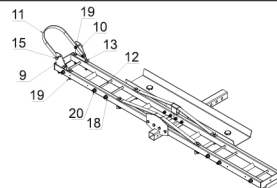
Place 2 (left tyre cradle) and 3 (right tyre cradle) inside 1 (main arm).
Secure the assembly with 14 (bolt) and 19 (nut) as shown in the drawing.

**Section****2**

Connect 6 (bridge support) and 8 (support arm) using 13 (bolt), 17 (washer) and 19 (nut).
Attach 7 (ramp) to the carrier with 16 (screw) to the support arms.

**Section****3**

Insert 12 (large bolt) into the holes of the left tyre cradle and secure with 18 (washer) and 20 (nut).
Attach 9 (left support plate) and 10 (right support plate) to the left tyre cradle using 13 (bolt) and 19 (nut).
Attach 11 (wheel bracket) to 9 and 10 using 15 (bolt) and 19 (nut).

**Section****4**

Attach 4 (steady support) to the end of main arm with 21 (plug).
Attach 5 (steady arm) to steady support with 21 (plug).
Use 22 (plug) and 23 (pin) to attach the carrier to the hitch receiver of the vehicle.

